

8600 Vertical Slider Latch Replacement

1. Remove Screen
2. Pull Sash stop vinyl away from interior mainframe



8600 Vertical Slider
Latch Replacement
(cont.)

3. Slide window sash upwards past the slick coat slide channel



8600 Vertical Slider
Latch Replacement
(cont.)

4.) Push latch plungers in
and remove sash from
window frame



8600 Vertical Slider Latch Replacement (cont.)

5.) Remove latch screws located on the back of the window sash and slide out



8600 Vertical Slider
Latch Replacement
(cont.)

6.) Insert replacement
latch and reinsert set
screw



8600 Vertical Slider
Latch Replacement
(cont.)

7.) Slide plunger all the way to the outside of the sash and reinsert VS latch spring



8600 Vertical Slider
Latch Replacement
(cont.)

8) Line up sash back into window frame and slide sash into closed position



8600 Vertical Slider
Latch Replacement
(cont.)

9.) Reinsert sash stop
vinyl and install screen



8800 Vertical Slider Latch Replacement (cont.)

3.) Push both latches in simultaneously and gently remove window sash



8800 Vertical Slider Latch Replacement (cont.)

4.) Remove broken latch set screw and slide latch out of sash assembly



8800 Vertical Slider Latch Replacement (cont.)

5.) Insert latch halfway
into the latch channel
and fasten set screw




8800 Vertical Slider Latch Replacement (cont.)

6.) Reinsert latch spring



8800 Vertical Slider Latch Replacement (cont.)

7.) Insert sash back into
window frame

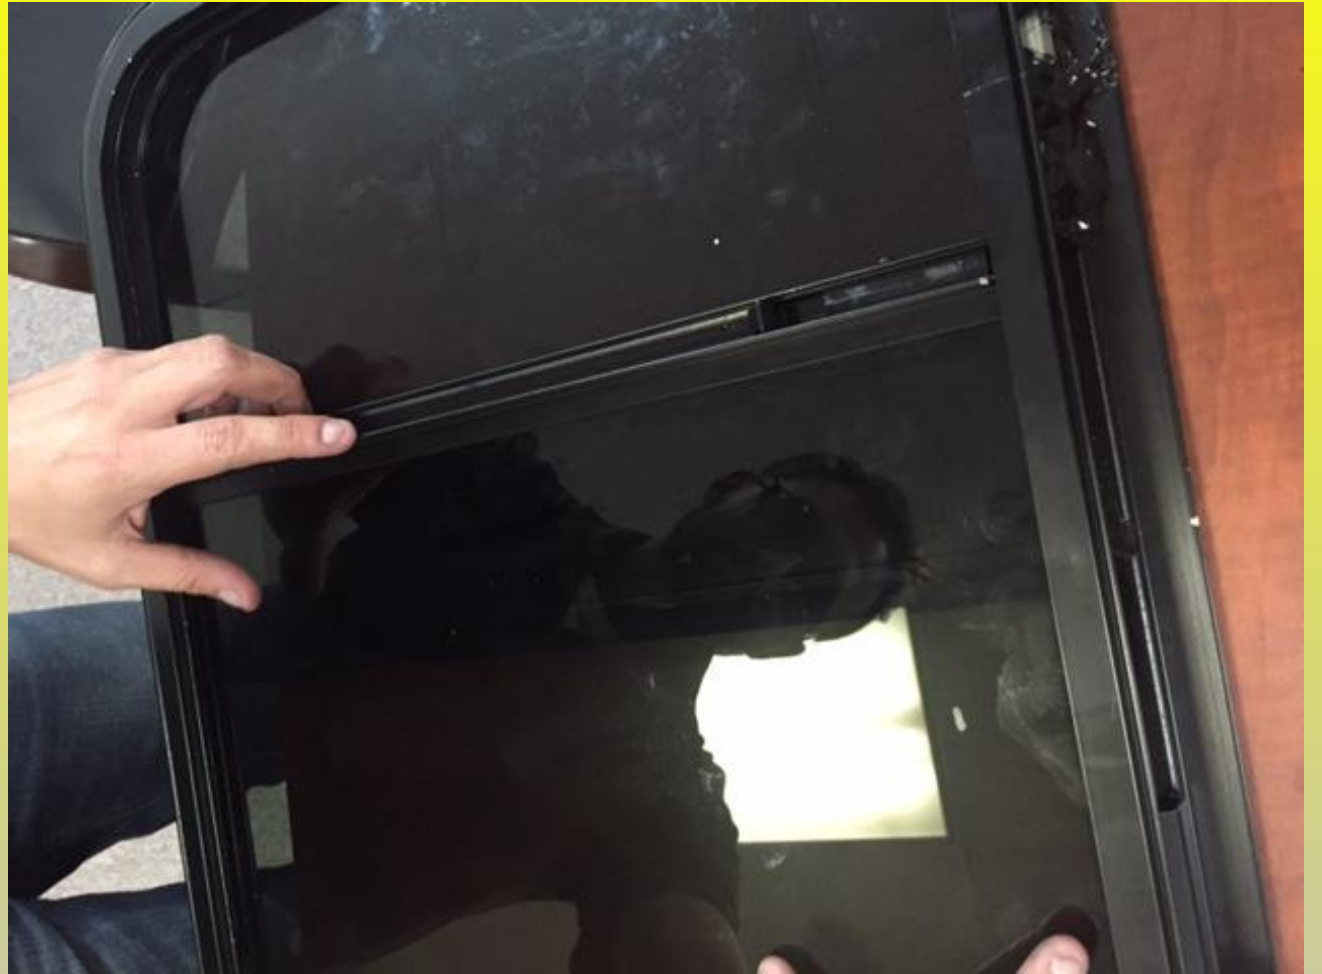

8800 Vertical Slider Latch Replacement (cont.)

8.) Slide track back into
window frame around
the glass



8800 Vertical Slider Latch Replacement (cont.)

9.) Reinsert sash stop set
screws

****Be sure the window
operates properly before
completion. If window
does not lock properly,
adjust track as needed****



8800 Full Exit Latch Replacement

(applies to some 8600, 8700, and 2000 windows)

8800 Full Exit Latch Replacement

1.) Open latch and
remove two Phillips
screws in latch base



8800 Full Exit Latch Replacement (cont.)

2.) Pull old latch out and
insert replacement latch
(in open position) into
outer frame notch




8800 Full Exit Latch Replacement (cont.)

3.) Fasten bottom screws
into outer frame (with
latch in the open
position)



8800 Full Exit Latch Replacement (cont.)


4.) Close latch and insert
top set screw on latch
base

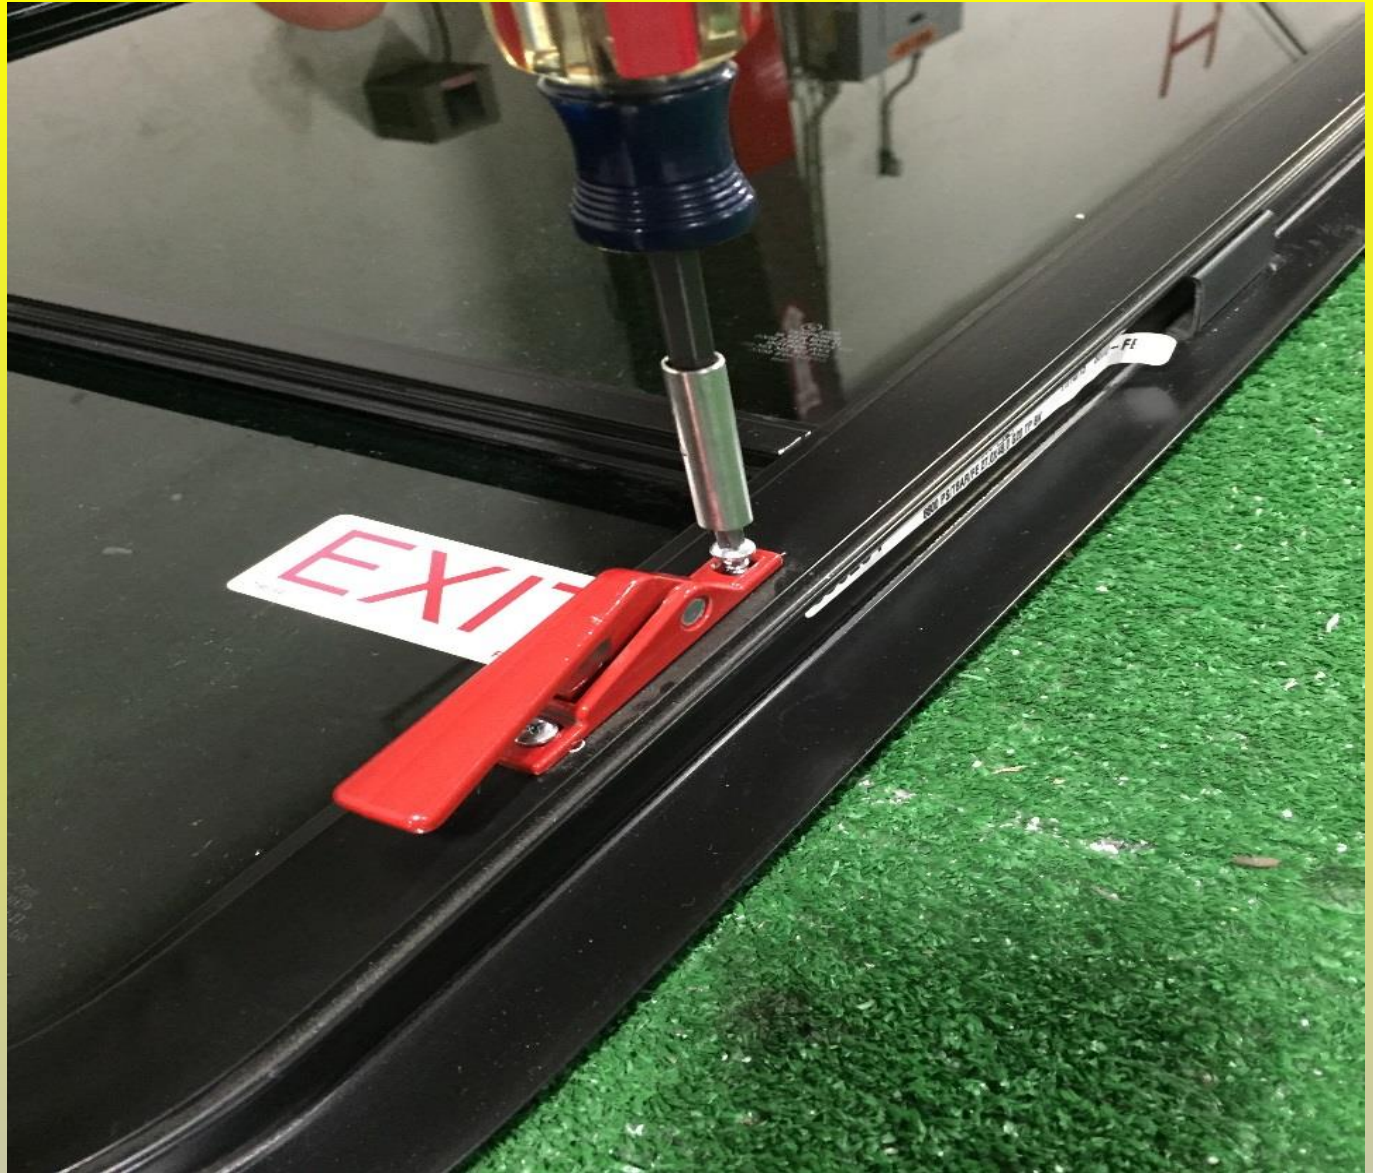

8800 Full Exit Latch Replacement (cont.)

****IF LATCH WILL NOT ENGAGE PROPERLY, THE LATCH CATCH CAN BE MOVED TO MAKE A PROPER CONNECTION****

1.) Open window and remove 2 catch screws located on the side of the inner panel

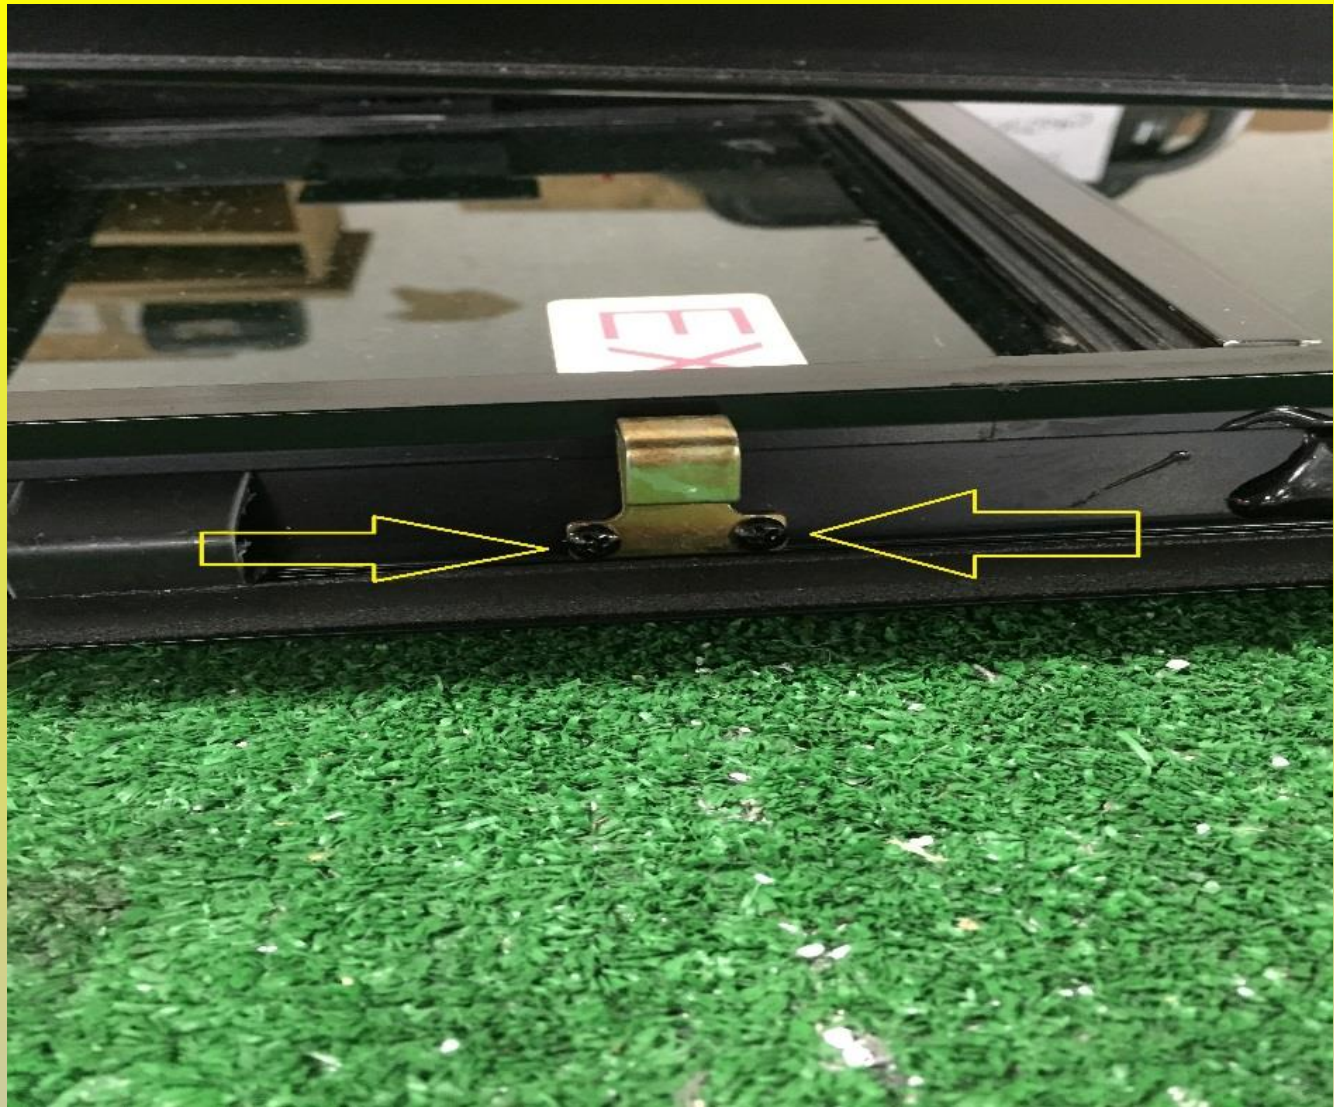

8800 Full Exit Latch Replacement (cont.)

2.) Move catch so the center is in line with the center of the rivet on the latch



8800 Full Exit Latch Replacement (cont.)

3.) Fasten set screws on catch

4.) Close window and ensure it locks properly

NOTE: You will hear a “click” when latch is fully & properly engaged