

CARE & MAINTENANCE

Maintenance Schedule

MAINTENANCE REQUIRED	FREQUENCY						REFER TO COMPONENT OWNERS MANUAL
	BEFORE USE	AFTER USE	MONTHLY	3 MONTH	6 MONTHS	YEARLY / BEFORE STORAGE	
Heating, Cooling & Ventilation (AC, Furnace, Vents)				Inspect & Clean			Yes
Axles	Inspect						Yes
Brakes	Test			Adjust			Yes
Entry Steps			Lubricate				
Landing Gear					Clean & Lubricate		Yes
Pinbox & Hitch Equipment	Inspect		Lubricate				
Safety Chains	Inspect						
Slideouts		Clean Roof	Run "In / Out"				
Tires	Inspect						Yes
Battery	Inspect						Yes
Electrical Cords / Receptacles	Inspect						
Generator / Generator Exhaust	Inspect						Yes
Exterior Finish (Roofs, Walls, Slideouts, Chassis)				Wash	Wax		
Exterior Moldings & Trims					Inspect		
Locks and Latches			Lubricate				
Roof Seams and Attachment Points					Inspect		
Seals					Inspect		
Fresh Water System		Drain				Sanitize / Winterize	
Waste System		Dump / Flush				Drain	
Water Heater		Drain				Flush / Winterize	Yes
Propane (LP) System						Test for Leaks	
Alarms / Detectors (Smoke, CO/LP)	Test						Yes