




TECH TIP: LP AUTOMATIC CHANGEOVER

(When and how to change your tanks)

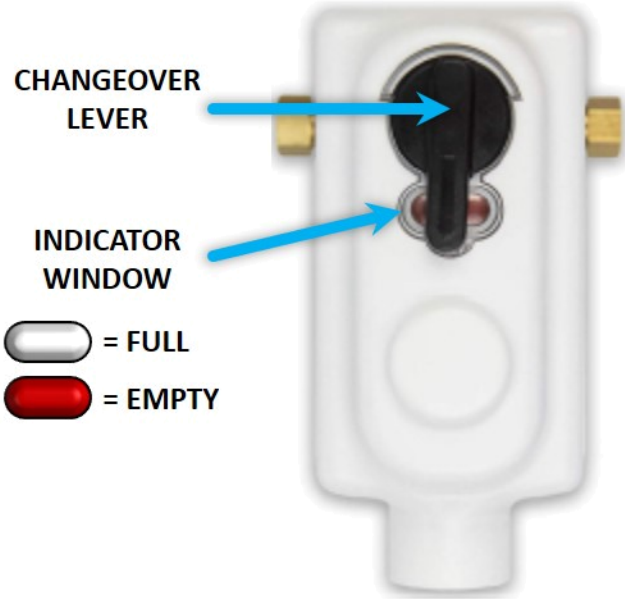

CHANGEOVER LEVER

← Pointing LEFT (FIG. A)

- Draws propane from tank on Off Door Side (Back Side) first.

→ Pointing RIGHT (FIG. B)

- Draws propane from Door Side (Entry Door Side) first.



FIG. A

FIG. B

How to Use The Automatic Changeover Feature?

With the valves on both propane tanks open, the "Changeover Lever" should be rotated to either the left or right hand side. As the first tank empties, the system will automatically begin pulling propane from the second tank. (NOTE: If the changeover lever is left in downward position, propane will be utilized from both tanks simultaneously, requiring both tanks to be refilled when empty).

How Do You Know When First Tank is Empty?

"Indicator Window" will show **RED**

How Do You Remove Empty Tank?

Rotate "Changeover Lever" 180-degrees and the indicator window should now be clear, indicating a full tank. At this time the empty tank can be removed and refilled.