




QUICK SEAL & CLEANING GUIDE

Regular cleaning and maintenance of the exterior of your Alliance Fifth Wheel will help keep the RV in the best possible condition both cosmetically and functionally.

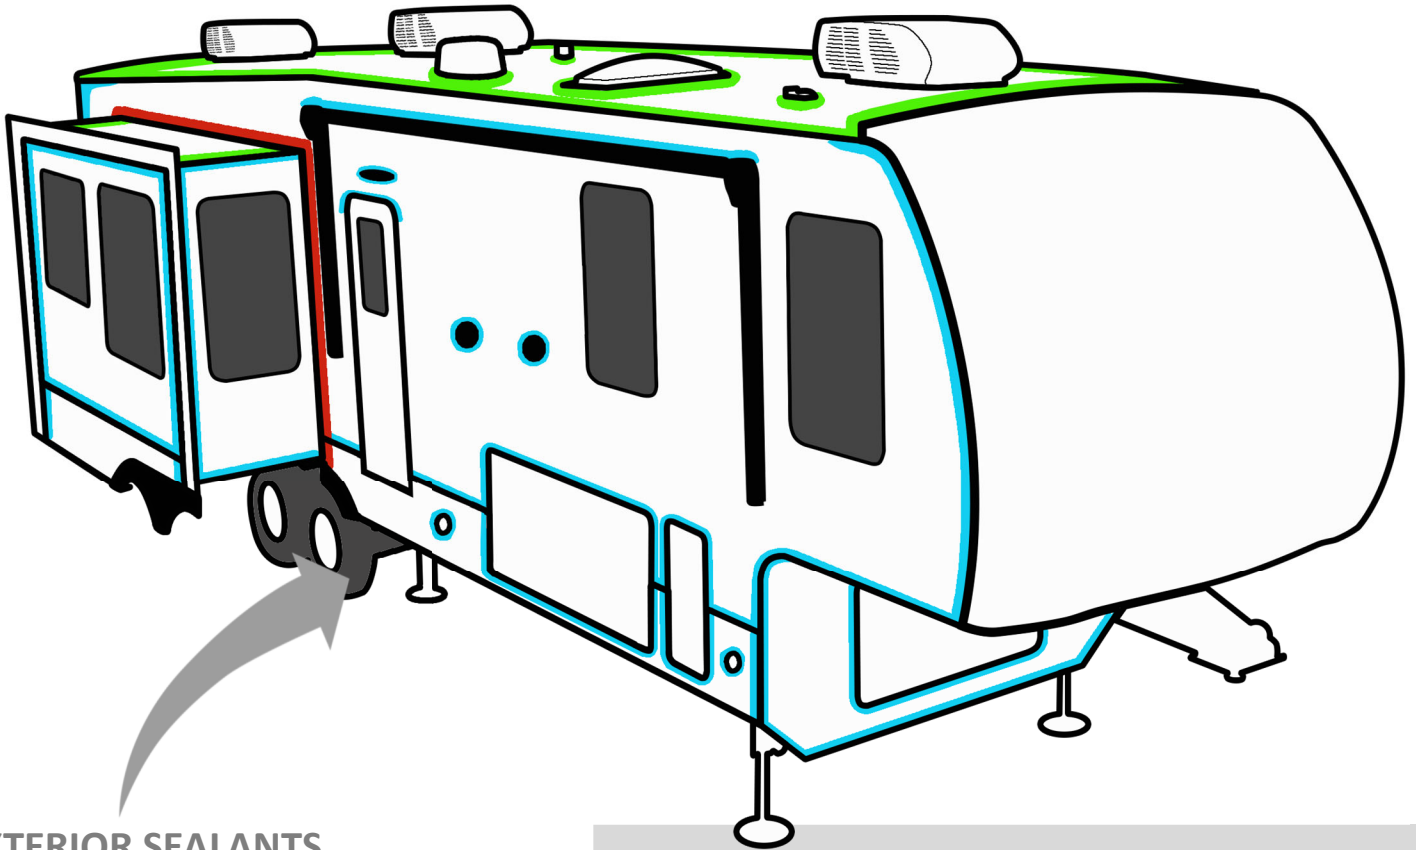

EXTERIOR SEALANTS

(See color coded diagram)



SELF LEVELING LAP SEALANT

We Use: Dicor Lap Sealant Self Leveling

For use where items are sealed to the Dicor PVC roof material (ie. roof mounted skylight, vents) and around the perimeter of the roof and slide roof.



MS POLYMER SEALANT

We Use: ChemLink Clear MS Polymer

For use on exterior walls around baggage doors, beltline, exterior speakers, marker and patio lights, slideroom and sidewall connection points.



TRI-POLYMER SEALANT

We Use: Teroson SIA 477

For use on bulb seals/gaskets around sliderooms.

CLEANING ROOF

Recommended Cleaners: Dicor RP-RC320S / RP-RC160CJ. Standard products such as 409, Fantastik or mild detergents are sufficient.

For stubborn spots, a rag dampened with mineral spirits can be used. (NOTE: Do NOT soak and never apply mineral spirits directly to the roof)

Process: Rinse roof membrane with clean water to remove loose dirt or debris. Use a medium bristle brush along with recommended cleaner, scrub and rinse roof thoroughly.



WASHING EXTERIOR WALLS & CAP

Recommended Cleaners: Mild car-wash soap and water

Process: Spray coach with water to remove dust and debris. With a car-washing mitt or sponge generously apply the soap/water solution and rinse with water.

WAXING EXTERIOR WALLS & CAP

Recommended Materials: Non-abrasive automotive style wax (Waxes with high abrasive compounds can harm the luster of the surface).

Process: Apply wax with a soft cloth gently onto the exterior of your RV and remove per wax manufacturer instructions.