


Auto Level Zero Point Calibration

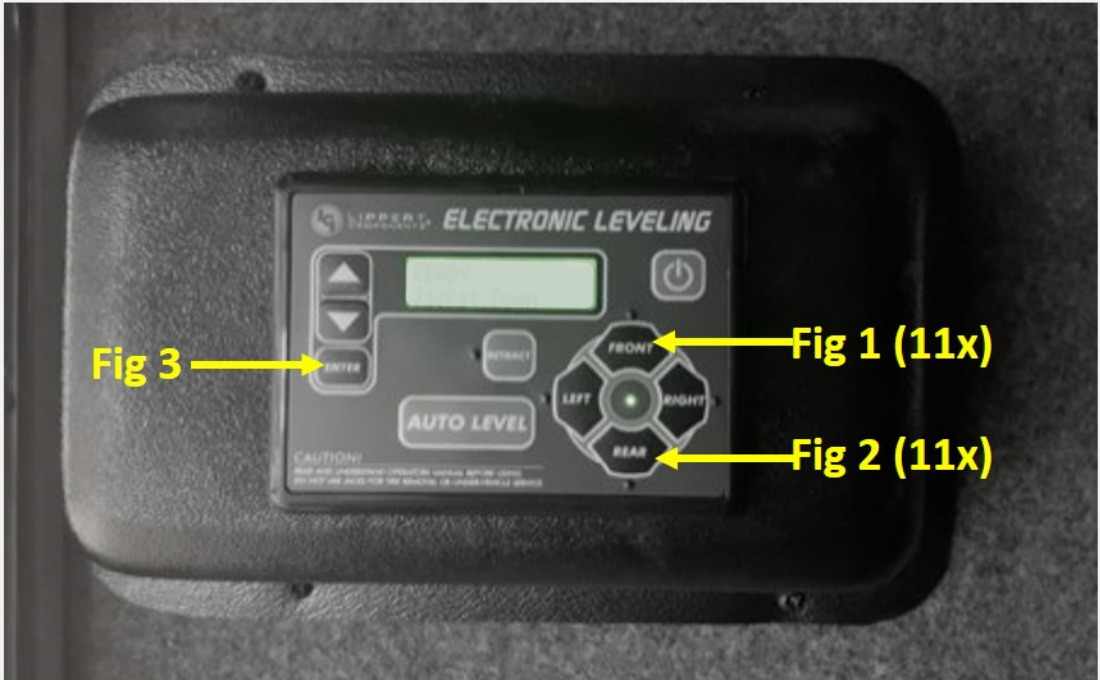

1. Manually level the fifth wheel to the desired level point.
2. Turn touchpad off.
3. Press the **FRONT** button (Fig. 1) 11 times.
4. Press the **REAR** button (Fig. 2) 11 times.
 - A tone will sound and the LCD screen display will read "ZERO POINT CALIBRATION."
5. Press the **ENTER** button (Fig. 3) to set the zero point.
 - LCD screen will then display "Zero Point Stability Check" and "PLEASE WAIT."
 - A tone will sound and the LCD screen display will read "ZERO POINT SUCCESSFUL."
 - The touchpad will then turn off.