





VENT PIPE INSPECTION

Remove vent cap top by taking out the set screw and pulling the top off). This will allow you to see the vent pipe inside the vent.

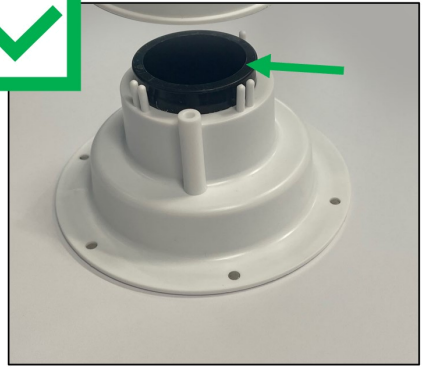

If vent pipe is **flush or above** the opening of the vent body, NO further action is needed.

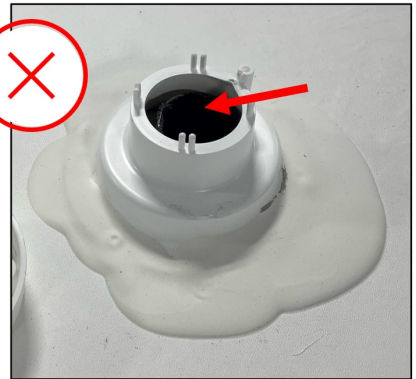

If vent pipe sits **below** the opening of the vent body, vent pipe will need to be extended to 2.5" above the roofline and vent reinstalled.